
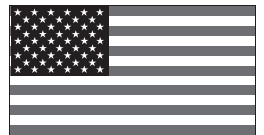


DK THREADING BOARD

- Load and thread the laminating film so that the film side [the “shiny” side] is next to the heat shoe.
- The adhesive side [the “dull” side] should face you.
- When threading the laminator, make sure the film and threading board go between the back set of rubber rollers.

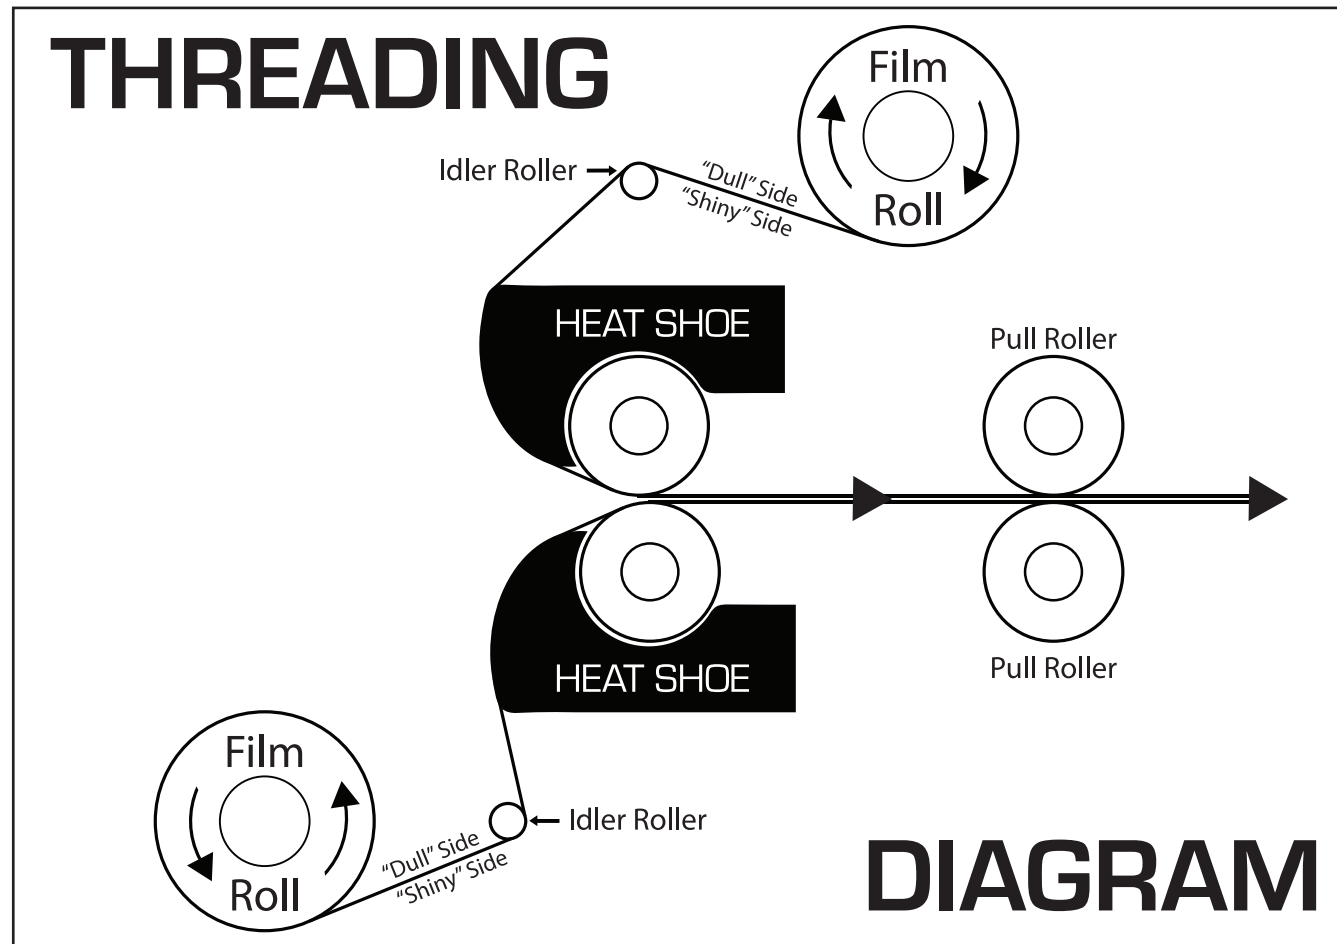

Made in the USA